


Start-up

Handling

Switch on equipment with the net switch. The switch is at the side control box.

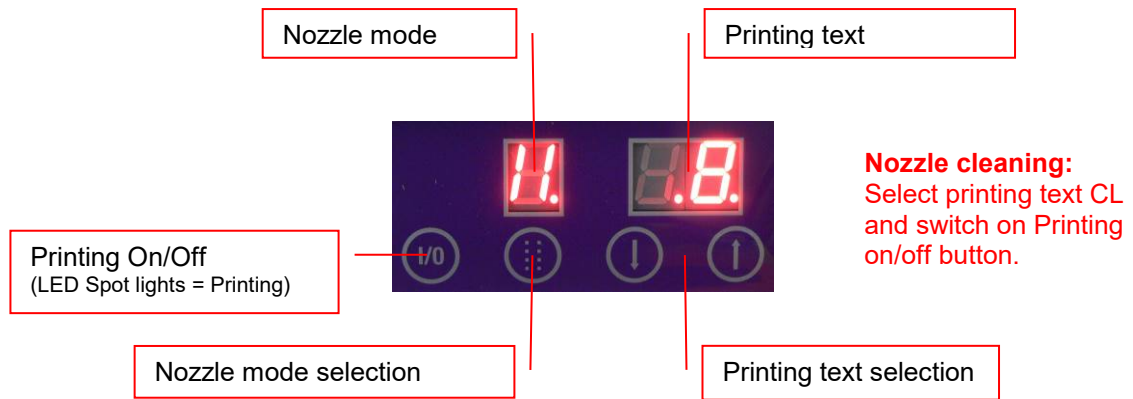

Nozzle modes for user



Ink consumption: 100%
Description: Nozzle rows 1 and 2 are at the same time active (300x300dpi).

Quality 100%



Ink consumption: 75%
Description: Nozzle rows 1 and 2 are at the same time active (300x225dpi).

Saving mode 75%



Ink consumption: 50%
Description: Nozzle rows 1 and 2 are at the same time active (300x150dpi).

Saving mode 50%

Nozzle modes for service and testing



Ink consumption: 25%
Description: Nozzle rows 1 and 2 are alternating active (150x150dpi)

Servicemode



Ink consumption: 0%
Description: No nozzle active (0x0dpi).

Servicemode



Nozzle cleaning:
Select printing text CL
and switch on Printing
on/off button.

Servicemode

Note:

When you turn OVOPRINT X drives the print head reference. After the date has changed, the current date will be updated. This will display the letters UP appears. After a few seconds the OVOPRINT X is ready for operation. (If none of the printing texts contain a date, no date will be updated.)