

1 Clean the ink cartridges daily before use

It's important to clean your ink cartridges daily before use to maintain good print quality and proper functioning of the cartridges. Dust and dried up ink will start to build up on the nozzle and clog up the tiny holes where the ink has to come out of. **The cartridge will get blocked if not properly cleaned!**

Cartridge cleaning procedure

1. Use a CLEAN tissue or paper towel to clean the nozzle of the ink cartridge.
2. Clean the nozzle by pulling it in a line over the tissue using your index finger on the other side of the tissue.
3. You may need to repeat this a couple of times to get the cartridge to work properly again.
4. Make sure to clean the gold contact points to ensure good connection with the printhead.



2 Insert the ink cartridges into the Egg-Jet23 R6


Lift up the locker [1] completely and place the ink cartridge carefully into the bottom positioning points [2] of the printhead cartridge plate from above.

Press the ink cartridge carefully into the printhead (against the back of the cartridge plate) with one hand and apply a light counter pressure on the back of the cartridge plate with the other hand.

Bring down the locker to keep the ink cartridge in place. The locker should fall over the little latch on the ink cartridge, so it "clicks" into the printhead.

Check before use if each cartridge is placed correctly!

If the cartridge is not placed correctly all the way against the back of the printhead, some contact points will not have a good connection and cause a bad imprint.

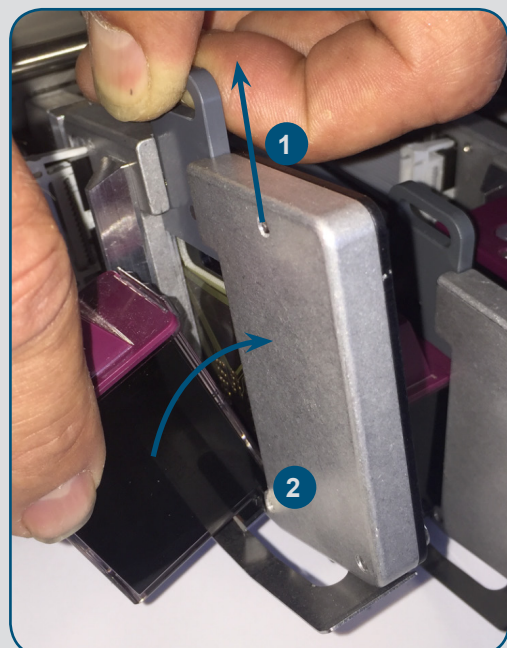

3 Adjust the height of the printheads

The height of the printheads can be adjusted by turning the "height adjustment bolt" [1].

The height position has to be set depending on the size of the eggs being printed, with larger eggs the printheads have to be higher, with smaller eggs lower.

The height position has to be set so the bottom of the printhead is gently touching the average sized eggs.

This way the larger eggs will lift up the printheads slightly and the smaller eggs will not be touched by the printheads but also not be too far away to get a clear imprint on them.




4 Select the print text and ink consumption mode on MMI panel

On/Off Dots:
The dots in the bottom of the display represent if printing is on or off.

Nozzle mode

Printing text



Printing On/Off
(LED Spot lights = Printing)

Nozzle cleaning:
Select printing text CL and switch on Printing on/off button.

Nozzle mode selection

Printing text selection

- Nozzle modes for users:**
- 
 Standard ink consumption
(For brown eggs) - 100%
 - 
 Medium ink consumption
(For brown eggs) - 75%
 - 
 Ink saving mode
(For white eggs) - 50%

Don't use any of the other options, these are for testing only!!